


Electric Towel Warmer

Model No: BK-101

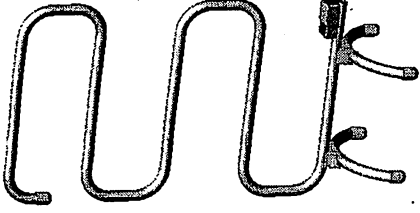

INSTRUCTION MANUAL

This towel warmer is intended for use in bathrooms or laundry areas.
READ THE INSTRUCTIONS CAREFULLY BEFORE OPERATING.

SPECIFICATION

Voltage: 110-120V,
Frequency: 60Hz
Rated power: 100W
Unit size: 950*500*300mm
Unit weight: 2.65kgs

OPERATING INSTRUCTIONS

- 1) Please read the installation instruction carefully to understand how to install your towel warmer.
- 2) Make sure to complete the installation.
- 3) Press the switch to (0) position (Power indicator is off).
- 4) Plug the power cord into an electrical outlet.
- 5) Press the switch to (1) position, the power indicator lights up and then the heater will start.

MAINTENANCE

If the supply cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified persons in order to avoid hazard.


WARNING

This appliance is intended only for drying textiles washed in water.

TOWEL AND CLOTH WARMER ARE ONLY ALLOWED TO BE INSTALLED AT A DISTANCE OF AT LEAST 0.6M FROM BATHTUBS AND SHOWERS.

- In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600 mm above the floor.
- The towel rail is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

INSTALLATION INSTRUCTION

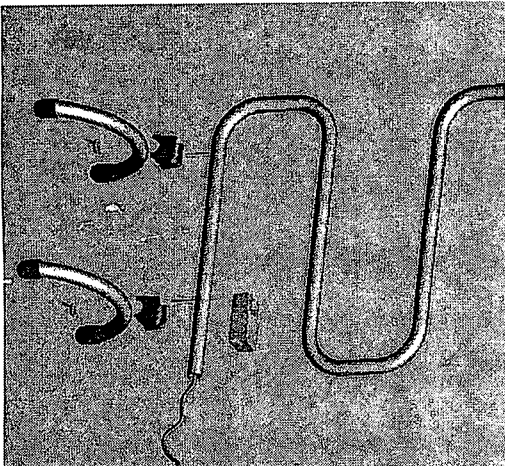

Timer range: from 0.5 hours to 7.5 hours

IMPORTANT SAFEGUARDS

- 1) Read all instructions before using this towel warmer.
- 2) Extreme caution is necessary when towel warmer is used by or near children or invalids and whenever the heater is left operating and unattended.
- 3) Always unplug heater when not in use.
- 4) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.

- 5) Do not use outdoors.
- 6) Never place the heater where it may fall into a bathtub or other water container.
- 7) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- 8) To disconnect heater remove plug from outlet.
- 9) Do not use it in areas where gasoline, paints, or flammable liquids are used or stored.
- 10) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 11) This heater is not intended for use with an extension cord. Plug the cord directly into an appropriate wall receptacle.
- 12) Your children should be supervised to ensure that they do not play with the appliance.
- 13) SAVE THESE INSTRUCTIONS.
- 14) Please do not insert and pull out plug, when your hands are wet.
- 15) Do not make the cord curve intensively.

CAUTION :

- THIS HEATER ONLY OPERATES IN UPRIGHT POSITION .
- STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE .
- DO NOT STORE UNTIL THE HEATER HAS COOLED DOWN .

WARNING:

- ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE .
- THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET .

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.