


## Thermostatic valve replacement guide

---

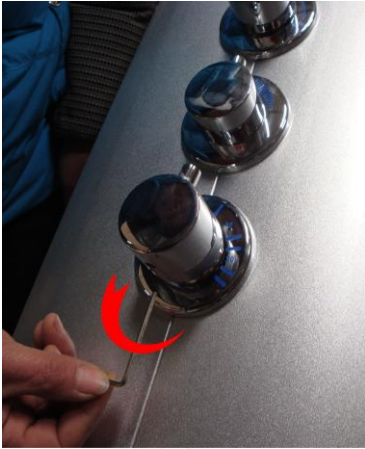

Pic 1



Pic 2

1.Take of faucet handle by hexagon screwdriver; 2.Extract black spacer by screwdriver;



Pic 3



Pic 4

3.Whirl the valve as picture,release the valve screw; 4.Take out valve after getting loose.

5.Put new vavle into hole,do steps oppositely.